

INSTRUCTIONS FOR CORRECT USE AND CARE OF YOUR *ECO-DIPPER™ DIP CUP

The ECO-Dipper™ can reduce chemical usage by over 50% when used correctly

Instructions for first use

1. Unscrew the top from the bottle and fill with fresh dip to just below neckline
2. Screw top back on until tight
3. Squeeze the bottle and half fill the dip cup chamber



← Fill Level



4. Remember to leave a 2" (5 cm) gap between brush and liquid to allow space for wiping action.
5. **REMEMBER - HALF FULL IS FULL!**
6. Some farmers' pour a little bit of dip through the brushes to get them wet or you can swirl the dip cup to coat the brushes.
7. It takes about a week for the brushes to 'break in' and 'soften up' and to give consistent savings.

Dipping Action

1. Make sure the Dip Cup is only half full. (See fill level)
2. Immerse each teat fully, small teats should go through the hole in the brushes, a slight twisting action helps - but may take a little practice and is easier once the brushes break in.
3. Withdraw the Dip Cup slowly to ensure good coverage and maximise savings!
4. It takes a little time to develop a precise dipping action - but the savings and coverage are worth it- after a few days farmers report that they dip just as quickly but spend less time filling Dip Cups.

Cleaning

1. To prevent contamination of brushes – it is good practice to clean them every few days.
N.B. Cleaning is recommended for all Dip Cups.
2. Methods:
 - Soaking the top unit over night in a weak solution of mild bleach and water – this allows the brushes to relax and unfurl if tangled
 - Gently massaging brushes with soapy water and fingers
 - Do not use harsh parlour detergents as these will shorten the life of the brushes

Removal of Brushes

1. To remove brush cassette for replacement insert fingers through brushes and pull cassette out – requires reasonable force or second method is to simply locate the two slots on either side of dip cup and slot a small flat screwdriver between rim and cassette cover and lever out the complete cassette taking care not to use too much force and break the top.
2. Pop the replacement brush into the top making sure you line up the slots and press down hard, it may be easier to do this without the bottle attached – again requires reasonable force!
3. Spare brushes may be purchased from your local dealer.

Part numbers for replacement parts

- ECD/001 ECO-Dipper complete
- ECD/002- Red Replacement Brush
- ECD/003- White Replacement Brush
- ECD/004- Blue Replacement Brush
- ECD/005 Bottle (500ml) Replacement
- ECD/008 Top Cup (no brush) Replacement



HELPLINE Number +44 7872 161128

*ECO-Dipper is a trademark of MAI Genesis

Dairymac Limited

Brook House 3 Brookview, Tanfield Lane, Wickham, Hampshire, PO17 5NW, UK

Tel: +44 (0) 1329 835571 Fax: +44 (0) 1329 835571 Email: sales@dairymac.com : Web: www.dairymac.com

Company Number: NI064477 VAT Number: GB 909 2822 16

